



User Guide

Wired Camera Web Interface

This guide uses the VIGI C540-W web page for demonstration.
Features and pictures may differ from your actual product.

Contents

About This Guide	1
Login	2
1.1 Connect the Camera to Network.....	3
1.2 Log In to the Web Interface	3
Live View	5
View Device Information	8
3.1 View System Logs.....	9
3.2 View Device Information.....	10
Change Camera Settings	11
4.1 Camera Display Settings	12
4.1.1 Configure Image Settings.....	12
4.1.2 Configure OSD Settings.....	15
4.1.3 Configure Privacy Mask	15
4.2 Camera Stream Settings.....	16
4.2.1 Configure Video Settings.....	16
4.2.2 Configure Audio Settings (Only for some models).....	18
4.2.3 Configure ROI.....	19
PTZ Settings (Only for Pan&Tilt Camera).....	20
5.1 Park Settings	21
5.2 Target Track Settings	21
Events.....	23
6.1 Motion Detection	24
6.2 Camera Tampering	25
6.3 Line Crossing Detection	26
6.4 Intrusion Detection	27
6.5 Region Entering Detection.....	29
6.6 Region Exiting Detection	31
6.7 Object Abandoned/Removal Detection.....	33

6.8	Vehicle Detection	35
6.9	Human Detection.....	36
6.10	Light Alarm (Only for some models)	37
6.11	Sound Alarm (Only for some models)	37
6.12	Exception Event	38

Recording and Storage.....39

7.1	Recording Schedule	40
7.2	Storage Management	41

Network Management.....42

8.1	Configure Network Connection	43
8.2	Configure Ports	44
8.3	Configure Port Forwarding.....	44
8.4	Configure IP Restriction	45
8.5	Configure Multicast.....	46

Cloud Service48

System Settings50

10.1	Configure Basic Settings	51
10.2	Modify System Time	51
10.3	Manage User Accounts	52
10.4	System Management	53
10.5	Upgrade Firmware.....	54
	10.5.1 Online Upgrade	54
	10.5.2 Local Upgrade	54
10.6	Reboot Device Regularly	54


About This Guide

This User Guide provides information for using and managing VIGI camera via a web browser. It explains functions of VIGI camera and shows you how to configure them.

Conventions

When using this guide, notice that:

- Features available in VIGI cameras may vary due to your region, device model, and firmware version. All images, steps, and descriptions in this guide are only examples and may not reflect your actual experience.
- The information in this document is subject to change without notice. Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information, and recommendations in this document do not constitute the warranty of any kind, express or implied. Users must take full responsibility for their application of any products.
- This guide uses the specific formats to highlight special messages. The following table lists the conventions that are used throughout this guide.

<u>Underlined</u>	Indicates hyperlinks. You can click to redirect to a website or a specific section.
Teal	Indicates contents to be emphasized and texts on the web page, including the menus, tabs, buttons and so on.
>	The menu structures to show the path to load the corresponding page.
 Caution	Reminds you to be cautious, and ignoring this type of note might result in device damage or data loss.
Note	Indicates information that helps you make better use of your device.

More Information

- For technical support, the latest version of the User Guide and other information, please visit <https://www.tp-link.com/support>.
- The Quick Installation Guide can be found where you find this guide or inside the package of the product.
- To ask questions, find answers, and communicate with TP-Link users or engineers, please visit <https://community.tp-link.com> to join TP-Link Community.



Login

This chapter guides you on how to log in to the web UI of the VIGI camera:

- [Connect the Camera to Network](#)
- [Log In to the Web Interface](#)


After the cameras are added to network, multiple methods are provided for you to monitor and manage cameras. You can manage and monitor the cameras remotely via the VIGI app or VIGI Security Manager, and you can also directly monitor and manage your camera via a web browser. Check the support page of the product for more manuals at www.tp-link.com.

♥ 1.1 Connect the Camera to Network

The camera works with an NVR for easier batch access and management. You can add cameras to network via an NVR.

1. Connect your cameras to the same network as your NVR (as shown below).
2. Power on your cameras.
3. Follow the NVR manual to add and activate your cameras.

Note: You can follow the Quick Start Guide included in the package to mount and add cameras to your network.

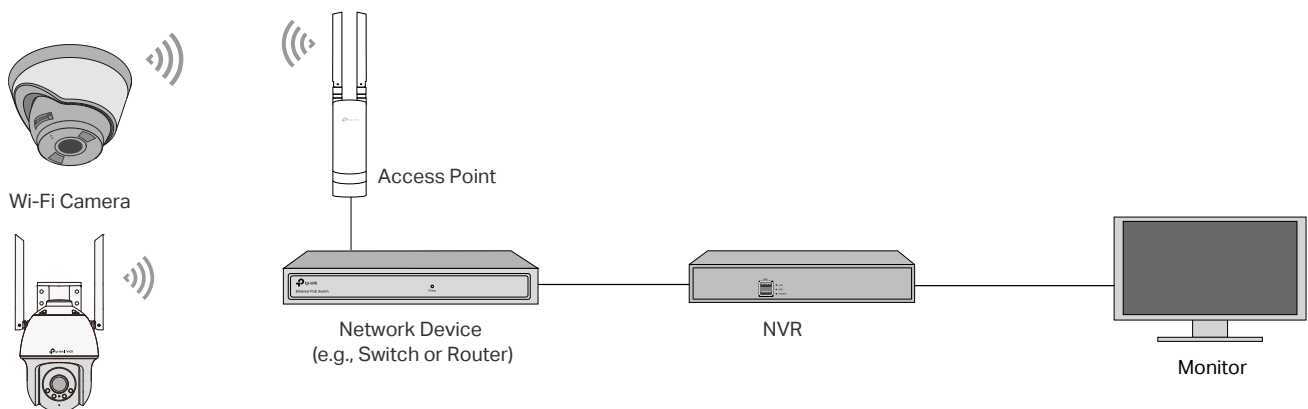

♥ 1.2 Log In to the Web Interface

With an intuitive user interface, it is easy to configure and manage the camera via a web browser. Follow the steps below to log in to the web UI of the camera for the first time.

1. Find the camera's IP address on your router's client page.
2. On your local computer, open a web browser and enter `https://camera's IP address` (`https://192.168.0.60` by default).

3. Select your **Country/Region** and **Time Zone**.



Initialize IPC

1 Set 2 Set Password

Country/Region


Time Zone

Language

Power Line Frequency

Next

4. Set a password to activate the camera. Click **Finish**.

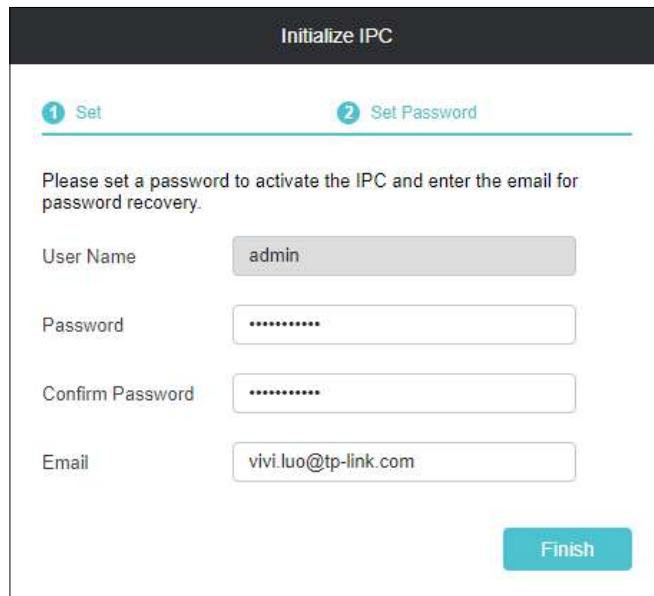

Initialize IPC

1 Set 2 Set Password

Please set a password to activate the IPC and enter the email for password recovery.

User Name

Password

Confirm Password

Email

Finish

Now, you can log in to the camera using the password set here.

Note:

1. For future logins, use the default username **admin** and the password you set for this camera.
2. If you forgot the password, click **Forgot password?** and follow the web instructions to reset the password.




Live View


You can monitor the camera in real time and respond to abnormal conditions with quick operations, such as zooming in the image, capturing screenshots.

1. Find the camera's IP address on your router's client page.
2. On your local computer, open a web browser and enter `https://camera's IP address` (`https://192.168.0.60` by default).
3. Log in with default user name **admin** and the password you set for this camera.
4. You can view the live video on the Preview page.

Note: Here we use the page for VIGI C540 Outdoor Full-Color PT Network Camera.

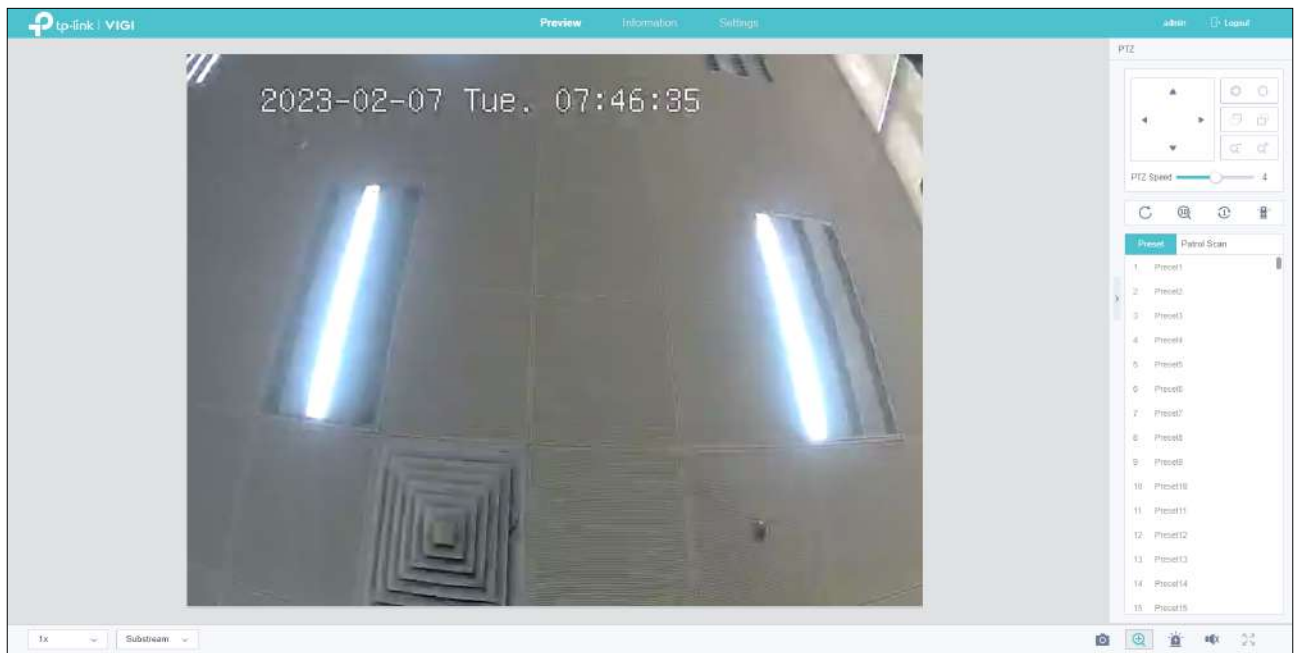

Click the corresponding buttons to change the image proportion.



Click to change the stream type.



Click to capture screenshots.



Click to zoom in/out the live image.



(Only for certain cameras) Click to trigger the sound alarm. It will last about 10 seconds.



(Only for certain cameras) Click to adjust the volume of the speaker.



Click to change to full screen.







(Only for the camera with Pan&Tilt) Click the arrow to adjust the PTZ direction.




(Only for the camera with Pan&Tilt) Drag to adjust the PTZ rotation speed.

Only for the camera with Pan&Tilt



-  Click to reset the PTZ position.
-  Click to start 3D positioning.
-  Click to start quick patrol.
-  Click to start quick park.



(Only for the camera with Pan&Tilt) Click Preset to set the preset PTZ position; click Patrol Scan to set or edit the patrol path.

3

View Device Information

This chapter introduces how to check the system logs and view your device information on the web UI. This chapter contains the following sections:

- [View System Logs](#)
- [View Device Information](#)

♥ 3.1 View System Logs

The camera uses logs to record, classify, and manage the messages of the system and devices. You can search, view, and export the logs.

Follow the steps below to search and export the logs.

1. Go to **Information > System Log > System Log**.
2. Specify the time range and log types and click **Search**. The filtered logs appear in the table.

The screenshot shows the 'System Log' interface. At the top, there are search filters: 'Start Time' (2022-09-14 13:46:37), 'End Time' (2022-09-21 13:46:37), and 'Log Type' (All). A 'Search' button is located to the right of the Log Type dropdown. Below the filters, the 'Current Log Type: All' is displayed. A table with 8 rows shows log entries with columns for 'No.', 'Recording Time', and 'Event'. At the bottom, there are 'Clear Logs' and 'Export Logs' buttons, and a pagination bar showing 'Total: 357', '1/45', and 'Page: 1'.

No.	Recording Time	Event
1	2022-09-21 13:46:36	ts package not finish, frame_length_left = 765...
2	2022-09-21 13:46:36	ts package not finish, frame_length_left = 260...
3	2022-09-21 13:46:24	ts package not finish, frame_length_left = 767...
4	2022-09-21 13:46:24	ts package not finish, frame_length_left = 260...
5	2022-09-21 13:48:16	[p2p_dbg] *** http close client(local) session...
6	2022-09-21 13:48:16	Delete a minor stream, current minor stream p...
7	2022-09-21 13:48:16	CloseSession called, 0th in 1
8	2022-09-21 13:48:12	[CLOUDCOM]server(0)-90100 cloudConn d...

Start/End Time

Specify a time range to filter the logs based on the recording time.

Log Type

Select a type from the drop-down list to filter the logs.

All: All types of logs.

Alarm: Alarms triggered by events, such as tampering, line crossing, and area intrusion.

Exception: Abnormal events that may influence camera's functions, such as video signal lost and errors of hard drive.

Operation: Operations that take place on the camera, such as login and upgrade.

Information: Informational messages, such as local device information.

Clear Logs

Click to clear all logs.


Export Logs

Click to export logs to your local computer.

♥ 3.2 View Device Information

You can view the basic information about the camera, including device model, firmware version, network information, stream information and device QR code.

Go to **Information > Device Information > Device Information** to view the details.



The screenshot displays the 'Device Information' page, which is organized into several sections:

- Device Information:**
 - Current System Time: 2022-09-21 14:10:36
 - Device Model: [Redacted]
 - Device Name: [Redacted]
 - Firmware Version: [Redacted]
- Network Information:**
 - IP: 192.168.0.60
 - MAC: 9C-A2-F4-9A-6F-53
- Stream Information:**
 - Resolution: 2560*1440
 - Frame Rate: 25
- Device QR Code:**
 - A QR code is displayed, which is partially obscured by a redacted area.

4

Change Camera Settings

This chapter introduces how to change the camera display settings and camera streams settings. It contains the following sections:

- [Camera Display Settings](#)
- [Camera Stream Settings](#)


♥ 4.1 Camera Display Settings

You can change the camera display settings according to your needs.

4.1.1 Configure Image Settings

Follow the steps below to configure image settings.

1. Go to **Settings > Camera > Display > Image**.
2. Configure the following parameters.

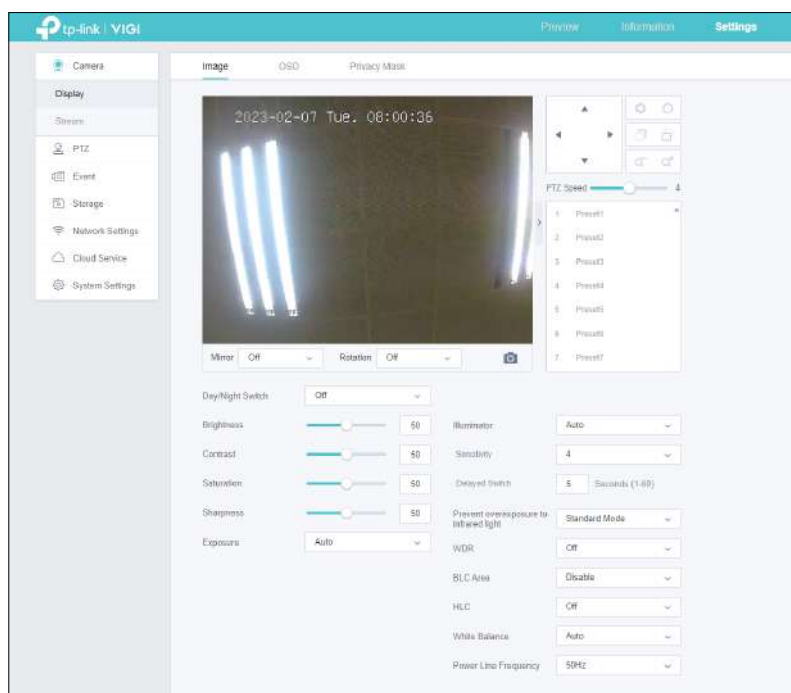

Mirror

Select a mirror mode. When you select **Off**, the image displays normally.

Rotation

Select a rotation angle. When you select **Off**, the image displays normally.

Day/Night Switch

Select a method to switch the image settings of day and night.

Off: The camera applies the same image settings in a day.

Auto: The camera switches the image mode of day and night automatically based on the light intensity.

Scheduled: The camera switches the image mode of day and night at specified time. If you select this method, adjust the slide bar to specify the switch time.


Brightness

Adjust the brightness of image. The image gets brighter when the value increases.

Contrast	Adjust the contrast of image. The image contrast gets stronger when the value increases.
Saturation	Adjust the saturation of image. The color of image gets richer when the value increases.
Sharpness	Adjust the sharpness of image. The image gets sharper when the value increases.
Exposure	<p>Select a exposure mode.</p> <p>Auto: The camera adjusts the exposure automatically. If you select Auto, specify the exposure scale. The image gets brighter when the scale increases.</p> <p>Manual: The image exposure is fixed. If you select Manual, adjust the slide bar of Gain to specify the exposure gain, and select a shutter speed. The image gets brighter when the gain increases or the shutter speed gets slower.</p>
Illuminator	<p>Select a mode to decide the usage of infrared light. The available options vary due to the mode you select in Day/Night Switch.</p> <p>Auto: The camera enables the infrared light automatically when it detects the environment turns dark, and disables when the environment is bright enough.</p> <p>Scheduled On/Off: Specify the time to enable and disable infrared light.</p> <p>Always On/Off: The camera enables/disables the infrared light all the time.</p>
Sensitivity	Specify Sensitivity to decide the light intensity that can trigger the switch of infrared light. The infrared light is easier to be triggered when the sensitivity decreases.
Delayed Switch	Decide how long the camera waits to enable or disable the infrared light when the environment reaches the light condition.
Prevent overexposure to infrared light	<p>Select standard mode or enhanced mode or manually adjust the brightness of image.</p> <p>Standard Mode: In this mode, the brightness of the infrared light will be automatically adjusted to prevent overexposure, but the exposure method will not be changed. When the brightness of the screen becomes higher, the infrared light will become brighter.</p> <p>Enhanced Mode: In this mode, the exposure mode will be optimized. The brightness of the fill light is generally lower in priority, because reducing the brightness will lead to a decrease in the brightness of the picture, the Gain value will introduce noise, and denoising will cause blur. Therefore, using this mode will change the exposure mode and bright areas are darkened and dark areas are brightened</p> <p>Manual: Manually adjust the brightness of image. The image gets brighter when the value increases.</p>

WDR	WDR (Wide Dynamic Range) can improve the image effects in backlit scenes. If you select On , the camera balances the light of the brightest and darkest areas automatically.
BLC Area	BLC (Backlight Compensation) can clear the dark area of the video. Select a position and the camera adjusts the exposure based on the light intensity in the area.
HLC	HLC (Highlight compensation) can compensate for brighter parts of your image, maintaining detail in brighter parts of the image that would otherwise be blown out.
White Balance	<p>Select a mode and the camera will adjust the color temperature to display the image approximated to the realistic vision effects.</p> <p>Auto: The camera adjusts the color temperature automatically.</p> <p>Daylight/Natural Light/Incandescent/Warm Light: The camera adjusts the color temperature to remove the color casts caused by the corresponding light.</p> <p>Current: The camera keeps the current color settings all the time.</p> <p>Custom: Adjust the slide bar to configure the color temperature, and the camera keeps the settings all the time.</p>
Power Line Frequency	Set the power line frequency.
Restore	Click to restore to factory default settings.

For some models, you can edit the **Fill Light Settings**.

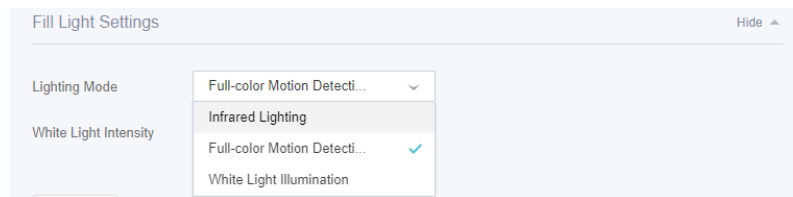

Lighting Mode	<p>Select the fill light mode which affects the anti-overexposure strategy and image.</p> <p>Infrared Lighting: The image is black and white.</p> <p>Full-color Motion Detection: When motion detection is detected, it will turn from black and white to full-color and the white light will be turned on at the same time. It includes three modes, standard, soft, and custom.</p> <p>White Light Illumination: The image is full-color and the white light will be turned on at the same time. It includes three modes, standard, soft, and custom.</p>
----------------------	--

4.1.2 Configure OSD Settings

You can configure OSD (On Screen Display) to edit the information displayed in Live View and recordings.

Follow the steps below to configure OSD settings.

1. Go to **Settings > Camera > Display > OSD**.
2. Configure the following parameters, and click **Save** to save your settings.

The screenshot shows the OSD configuration page. At the top, there are tabs for 'Image', 'OSD', and 'Privacy Mask'. The main area displays a camera feed with the OSD text '2022-10-10 Mon 18:26:04'. Below the feed, there are several settings:

- Date:** Checked, value: 2022-10-10 18:26:04
- Week:** Checked, value: Monday
- Channel Name:** VIGI C340I 1.0
- Custom 1:** custom 1
- Custom 2:** custom 2
- Display Effect:** Opaque, not blinking
- Font Size:** Adaptive
- Font Color:** Default

At the bottom, there are 'Restore' and 'Save' buttons.

Date Check to display the date on the image

Week Check to display the week on the image.

Channel Name Check to display the channel name on the image.
You can also check **Custom** and specify a text to display.

Display Effect Set the display effect of the image.

Font Size Set the font size.

Font Color Set the font color.


Restore Click to restore to factory default settings.

4.1.3 Configure Privacy Mask

With Privacy Mask, you can set privacy area in the image. The area cannot be recorded and monitored.

Follow the steps below to configure Privacy Mask.

1. Go to **Settings > Camera > Display > Privacy Mask**.
2. Enable **Privacy Mask**. Draw the privacy areas on the preview screen (the blue squares in the picture below). Use the mouse to adjust the size and location of areas. To remove a certain privacy area, select it and click **Delete**. To remove all privacy areas, click **Clear**. Click **Save** to finish the configuration.

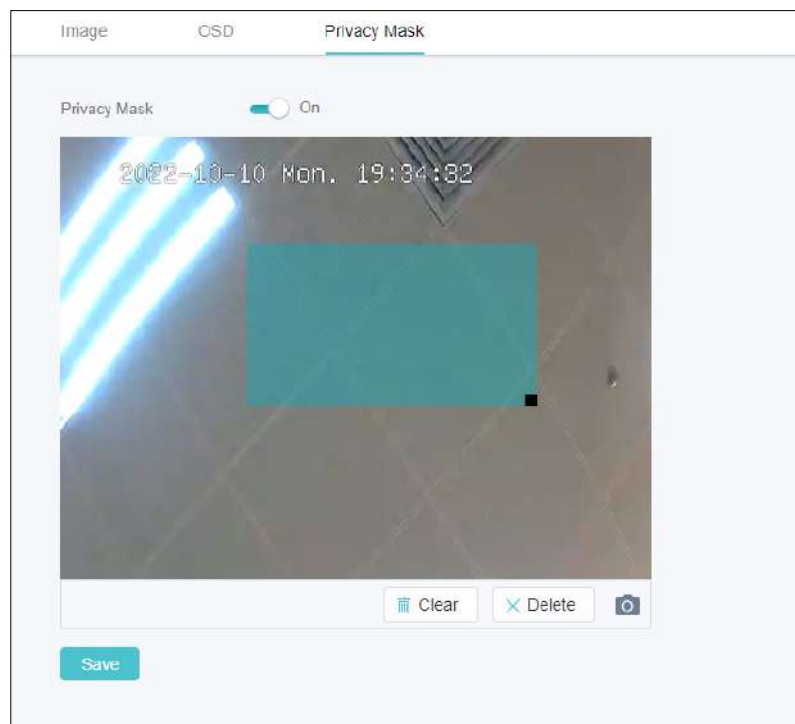

♥ 4.2 Camera Stream Settings

In Stream Settings, you can configure video stream levels, change the audio output settings and ROI (Region of interest) level.

Video stream levels decide the video quality in Live View and recording, and you can adjust the video quality of certain area by specifying the ROI level.

4.2.1 Configure Video Settings

Follow the steps below to configure video settings.

1. Go to **Settings > Camera > Stream > Video**.

2. Configure the following parameters, and click **Save** to save your settings.

The screenshot shows a settings panel with three tabs: Video, Audio, and ROI. The 'Video' tab is active. The settings are as follows:

- Stream Type: Main Stream
- Video Encoding: H265
- Resolution: 2560*1440
- Video Frame Rate: 25
- Bit Rate Type: VBR
- Image Quality: A slider is positioned at the 'Medium' mark, with 'Low' and 'High' also labeled.
- Smart Coding: A toggle switch is turned 'On'.
- Max Bit Rate: 1536

At the bottom of the panel are two buttons: 'Restore' and 'Save'.

Stream Type	Two stream types are supported, main stream and substream. You can decide which stream is applied based on network bandwidth and device performance.
Video Encoding	Select the encoding type of the stream. Compared with H.264, H.265 is improved in reducing the file size and saving the bandwidth.
Resolution	Specify the resolution of the video stream. The screen displays images more clearly when the resolution increases.
Video Frame Rate	Specify the frame rate of videos. The video is more fluent when the rate increases.
Bit Rate Type	Select a type of bit rate. VBR: The bit rate changes with the image within Maximum Bit Rate. CBR: The bit rate is Maximum Bit Rate all the time.
Image Quality	When VBR selected as the bit rate type, set the video quality as high, medium, or low.
Smart Coding	Enable Smart Coding to improve compression performance.

Max Bit Rate	When VBR selected as the bit rate type, specify the upper limit of bit rate. When CBR selected as the bit rate type, specify the bit rate.
Restore	Click to restore to factory default settings.

4.2.2 Configure Audio Settings (only for some models)

Follow the steps below to configure video settings.

1. Go to **Settings > Camera > Stream > Audio**.
2. Configure the following parameters, and click **Save** to save your settings.


Mute	Toggle to mute the speaker of the camera.
Output Volume	Adjust the volume of the speaker.

System Volume	Adjust the volume of the sound alarm.
Audio Coding	Select the encoding type of the audio.
Audio Input	Select audio input device.
Input Volume	Adjust the volume of the microphone.
Noise Filtering	Enable noise filtering to remove the noise from the video.
Audio Switch	Turn on of the microphone.
Restore	Click to restore to factory default settings.

4.2.3 Configure ROI

In ROI, you can configure the interest level of a specified area in each channel. The level 1–6 is ranked from low to high. The higher the ROI level, the better image quality.

1. Go to **Settings > Camera > Stream > ROI**.
2. Select the stream type and enable ROI. Draw an area on the preview screen (the blue square in the picture below). Use the mouse to adjust the size and location of areas. Specify the ROI level and click **Save**.

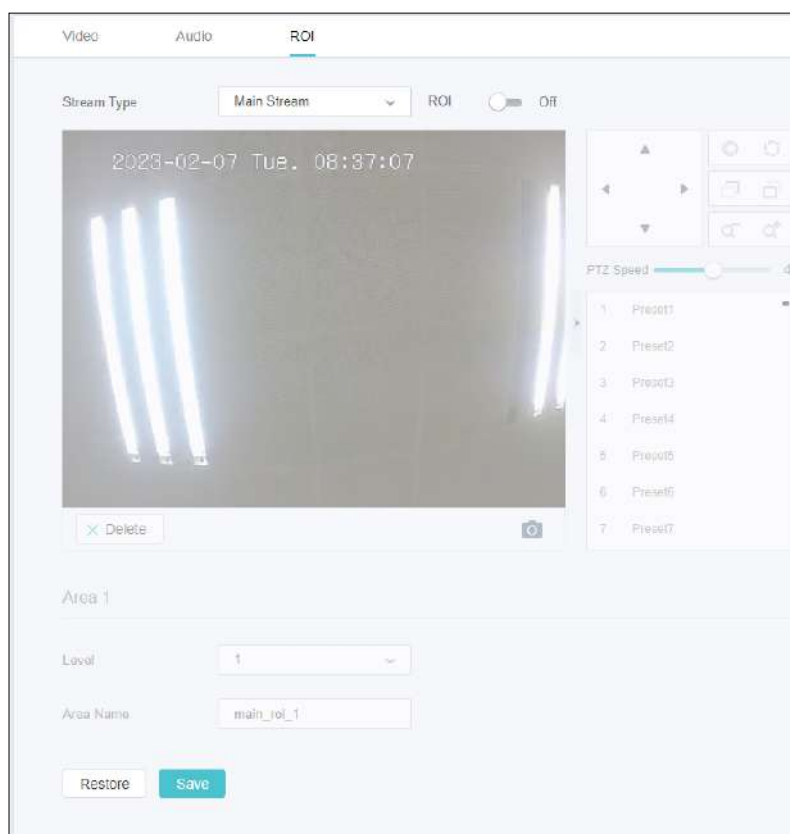

5

PTZ Settings (Only for Pan&Tilt Camera)

This chapter introduces how to change the PTZ settings. It contains the following sections:

- [Park Settings](#)
- [Target Track Settings](#)

♥ 5.1 Park Settings

When Park is enabled, the camera will perform the preset position, path, or pattern automatically if there is no operations in specified time. Follow the steps below to enable Park.

1. Go to **Settings > PTZ > Park**.

The screenshot shows the 'Park' settings page. At the top, there is a 'Park' toggle switch which is currently turned 'On'. Below this, under the heading 'Parameter Settings', there are three configuration fields:

- Park Time:** A text input field containing the number '5', followed by the text 'Seconds (5-720)'.
- Park Mode:** A dropdown menu currently showing 'Preset'.
- Park Mode ID:** A dropdown menu currently showing 'No presets added.', with a note to the right that says 'Please go to Preview to set a preset.'

 At the bottom left of the settings area, there is a teal 'Save' button.


2. Enable Park, select a mode and a preset, and enter the park time.

Park Time	When there is no operations during this time, the camera will perform the preset.
Park Mode	Select a mode to decide what kind of preset the camera will perform.
Park Mode ID	Select a preset from the drop-down list. The presets in the list vary based on the selected park mode.

♥ 5.2 Target Track Settings

When Target Track is enabled, you can set the smart detection, then the camera will track the specific target type.

1. Go to **Settings > PTZ > Target Track**.

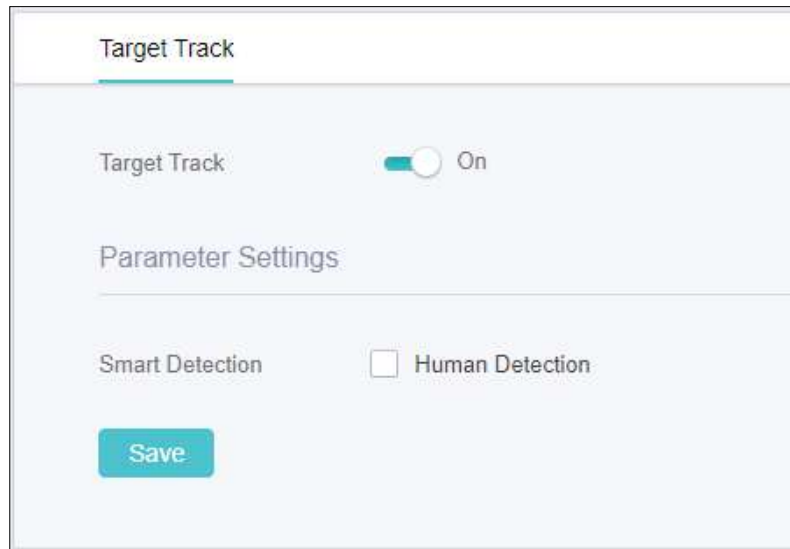

2. Enable Target Track, select the specific target type.

6

Events


This chapter guides you on how to configure the event settings and alarm actions when your cameras detect different types of events. VIGI camera monitors the user-defined areas and you'll be automatically alerted to any suspicious activity in your home and office. This chapter includes the following sections:

- [Motion Detection](#)
- [Camera Tampering](#)
- [Line Crossing Detection](#)
- [Intrusion Detection](#)
- [Region Entering Detection](#)
- [Region Exiting Detection](#)
- [Object Abandoned/Removal Detection](#)
- [Vehicle Detection](#)
- [Human Detection](#)
- [Light Alarm \(Only for some models\)](#)
- [Sound Alarm \(Only for some models\)](#)
- [Exception Event](#)

♥ 6.1 Motion Detection

Motion detection allows cameras to detect the moving objects in the monitored area and triggers alarm actions. You can customize the motion detection settings, select the triggered actions and set the alarm schedule for cameras. Follow the steps below to finish the configuration.

1. Go to **Settings > Event > Basic Event > Motion Detection**.

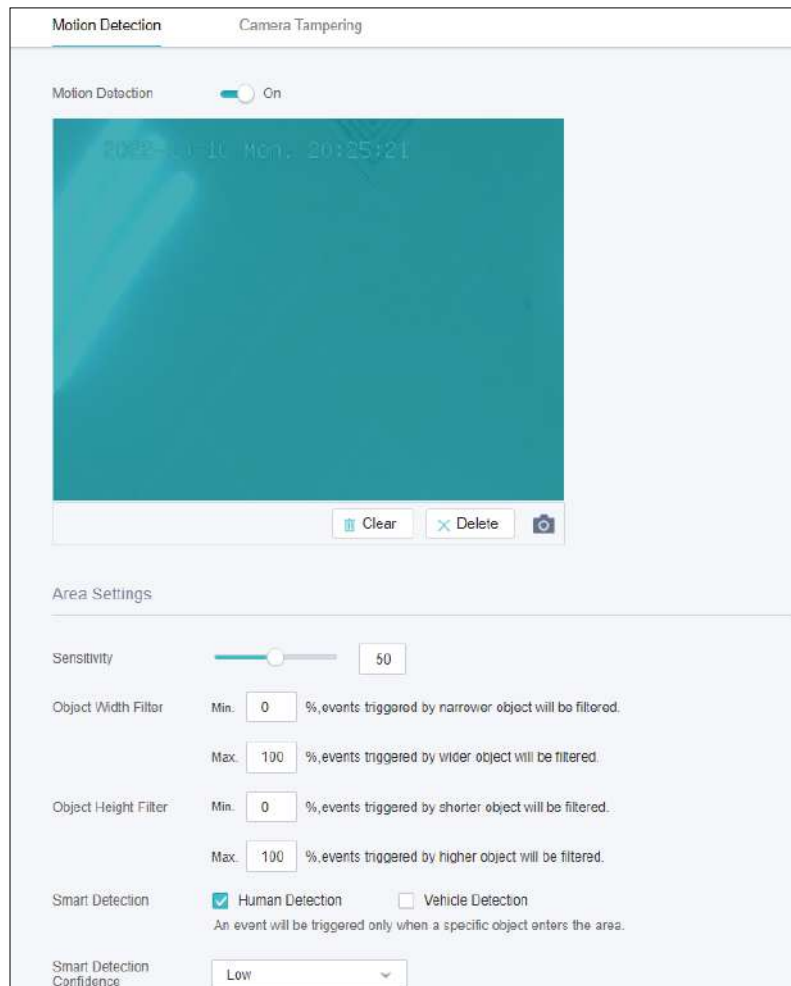

2. Enable **Motion Detection**.
3. Draw rectangles for motion detection on the preview screen. The whole region is selected by default. Then configure the motion detection settings.

Note: The maximum number of customized areas is 4.

Sensitivity	Adjust the value of sensitivity. A higher value can trigger alarm actions more easily.
Object Width Filter	Set the minimum and maximum object width to filter the corresponding events.
Object Height Filter	Set the minimum and maximum object height to filter the corresponding events.

Smart Detection	Select the detection type. It can be configured only for the cameras which support human detection and vehicle detection.
Smart Detection Confidence	Select the detection type. It can be configured only for the cameras which support human detection and vehicle detection.

- Set the processing mode. Note that the process mode options vary by model.

Processing mode Hide ▲

Record The device will start recording when an event is detected.

Push notifications The device will send a message to the TP-Link VIGI app when an event is detected.

Sound Alarm The alarm on the camera will be triggered when an event is detected.

Light Alarm The light on the camera will flash when an event is detected.

- Click **Save** to save the settings.

▼ 6.2 Camera Tampering

Camera tampering triggers alarm actions when an area of camera's lens is purposely blocked, obstructed or vandalized. You can customize the video tampering settings, select the triggered actions and set the alarm schedule for cameras. Follow the steps below to finish the configuration.

- Go to **Settings > Event > Basic Event > Camera Tampering**.

Motion Detection Camera Tampering

Camera Tampering On

Parameter Settings:

Sensitivity 50

Processing mode

Push notifications The device will send a message to the TP-Link VIGI app when an event is detected.

Sound Alarm The alarm on the camera will be triggered when an event is detected.

Light Alarm The light on the camera will flash when an event is detected.

Save

- Enable **Camera Tampering**.
- Set the sensitivity of video tampering. A higher value can trigger the alarm actions more easily.
- Set the processing mode. Note that the process mode options vary by model.

Processing mode

Push notifications The device will send a message to the TP-Link VIGI app when an event is detected.

Sound Alarm The alarm on the camera will be triggered when an event is detected.

Light Alarm The light on the camera will flash when an event is detected.


Save

- Click **Save** to save the settings.

♥ 6.3 Line Crossing Detection

Line crossing detection triggers alarm actions when cameras detect that moving objects cross a customized virtual line. You can customize the line crossing detection settings, select the triggered actions and set the alarm schedule. Follow the steps below to finish the configuration.

1. Go to **Settings > Event > Smart Event**, select **Line Crossing Detection** from the drop-down list.

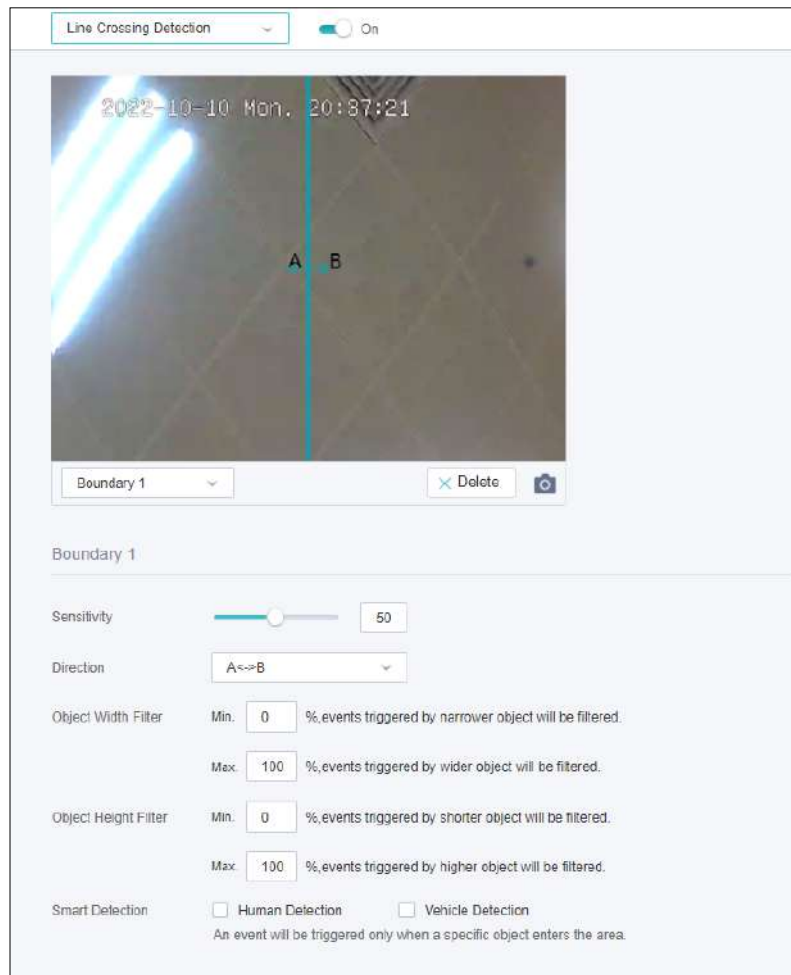

2. Draw lines on the preview screen. Select the line and configure settings of line crossing detection.

Note: The maximum number of customized lines is 4. You need to configure settings for each line.

Sensitivity

Set the sensitivity of line crossing detection. A higher value can trigger alarm actions more easily.

Line Crossing Direction

A->B: Only the object crossing the configured line from the A side to the B side can be detected.

B->A: Only the object crossing the configured line from the B side to the A side can be detected.

A<->B: The object goes across the configured line with both directions can be detected.

Object Width Filter	Set the minimum and maximum object width to filter the corresponding events.
Object Height Filter	Set the minimum and maximum object height to filter the corresponding events.
Smart Detection	Select the detection type. It can be configured only for the cameras which support human detection and vehicle detection.

3. Set the arming schedule.

The screenshot shows the 'Arming Schedule' configuration window. At the top, it says 'Line crossing detection will be enabled only during the specific periods.' and has a 'Clear schedules' button. Below is a grid with days of the week (Monday to Sunday) on the y-axis and hours (0 to 24) on the x-axis. All cells in the grid are filled with blue, indicating that line crossing detection is enabled for all hours of every day.

4. Set the processing mode. Note that the process mode options vary by model.

The screenshot shows the 'Processing mode' configuration window. It has four options, each with a checkbox and a description:


- Record** The device will start recording when an event is detected.
- Push notifications** The device will send a message to the TP-Link VIGI app when an event is detected.
- Sound Alarm** The alarm on the camera will be triggered when an event is detected.
- Light Alarm** The light on the camera will flash when an event is detected.

5. Click **Save** to save the settings.

♥ 6.4 Intrusion Detection

Intrusion detection triggers alarm actions when cameras detect an intrusion in the specified areas. You can customize the intrusion detection settings, select the triggered actions and set the alarm schedule. Follow the steps below to finish the configuration.

1. Go to **Settings > Event > Smart Event**, select **Intrusion Detection** from the drop-down list.

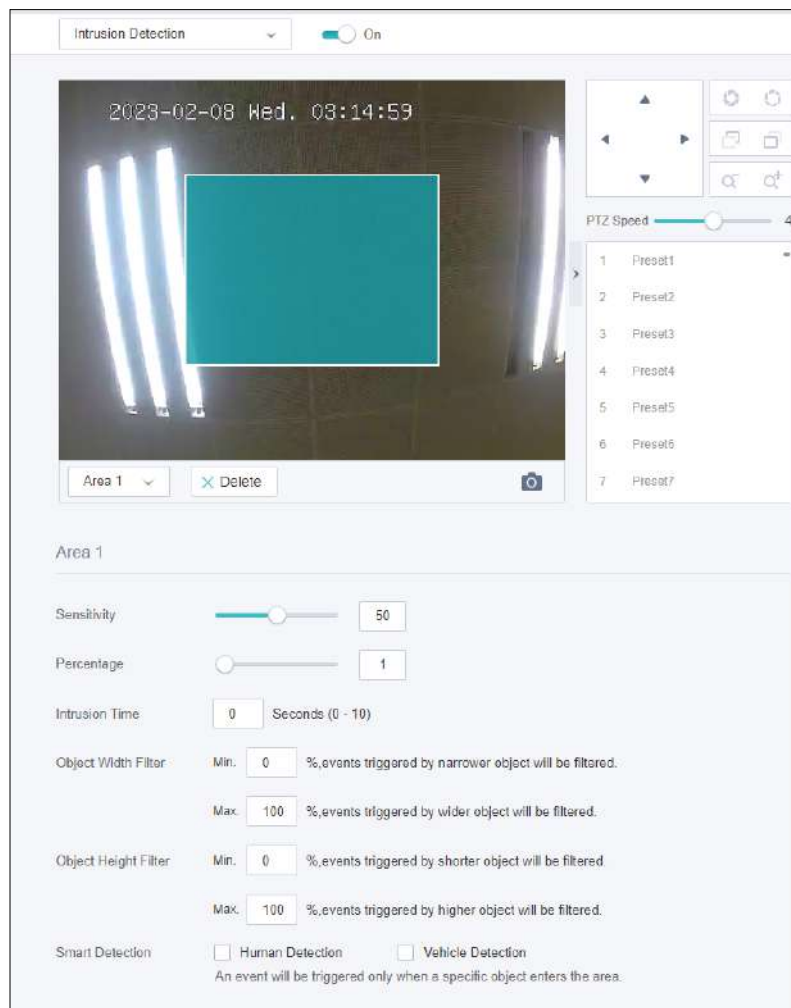


2. Draw intrusion areas on the preview screen. Select the area and configure the settings.

Note: The maximum number of customized areas is 4. You need to configure settings for each area.


Sensitivity	Set the sensitivity of intrusion detection. A higher value can trigger alarm actions more easily.
Percentage	Set the percentage of intrusion detection. When an object takes up the specific percentage of the area, the alarm actions will be triggered.
Intrusion Time	Set the intrusion time. When an object intrudes this area for specific time, the alarm actions will be triggered.
Object Width Filter	Set the minimum and maximum object width to filter the corresponding events.
Object Height Filter	Set the minimum and maximum object height to filter the corresponding events.
Smart Detection	Select the detection type. It can be configured only for the cameras which support human detection and vehicle detection.

3. Set the arming schedule.

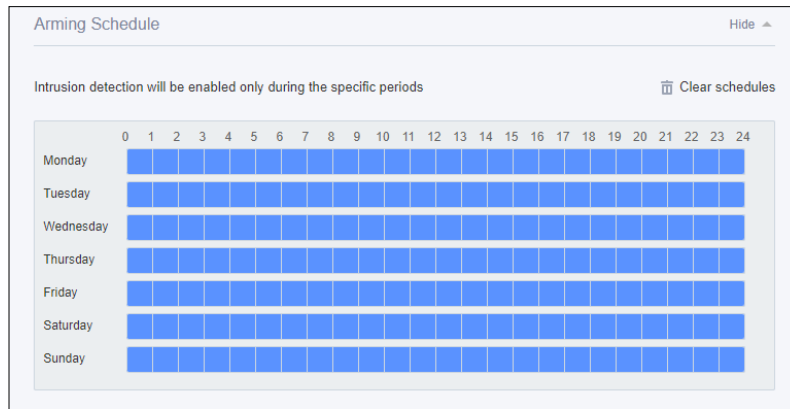

The screenshot shows the 'Arming Schedule' configuration page. At the top, it says 'Arming Schedule' with a 'Hide' button. Below that, a note states 'Intrusion detection will be enabled only during the specific periods' and a 'Clear schedules' button. The main part of the interface is a grid with 24 columns representing hours (0-23) and 7 rows representing days of the week (Monday to Sunday). All cells in the grid are filled with blue, indicating that intrusion detection is enabled for all hours of every day.

4. Set the processing mode. Note that the process mode options vary by model.

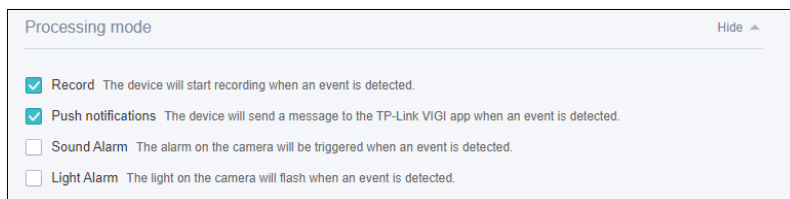

The screenshot shows the 'Processing mode' configuration page. At the top, it says 'Processing mode' with a 'Hide' button. Below that, there are four options, each with a checkbox and a description:


- Record The device will start recording when an event is detected.
- Push notifications The device will send a message to the TP-Link VIGI app when an event is detected.
- Sound Alarm The alarm on the camera will be triggered when an event is detected.
- Light Alarm The light on the camera will flash when an event is detected.

5. Click **Save** to save the settings.

◆ 6.5 Region Entering Detection

Region entering detection triggers alarm actions when cameras detect moving objects enter the specified regions. You can customize the region settings, select the triggered actions and set the alarm schedule. Follow the steps below to finish the configuration.

1. Go to **Settings > Event > Smart Event**. Select **Region Entering Detection** from the drop-down list.

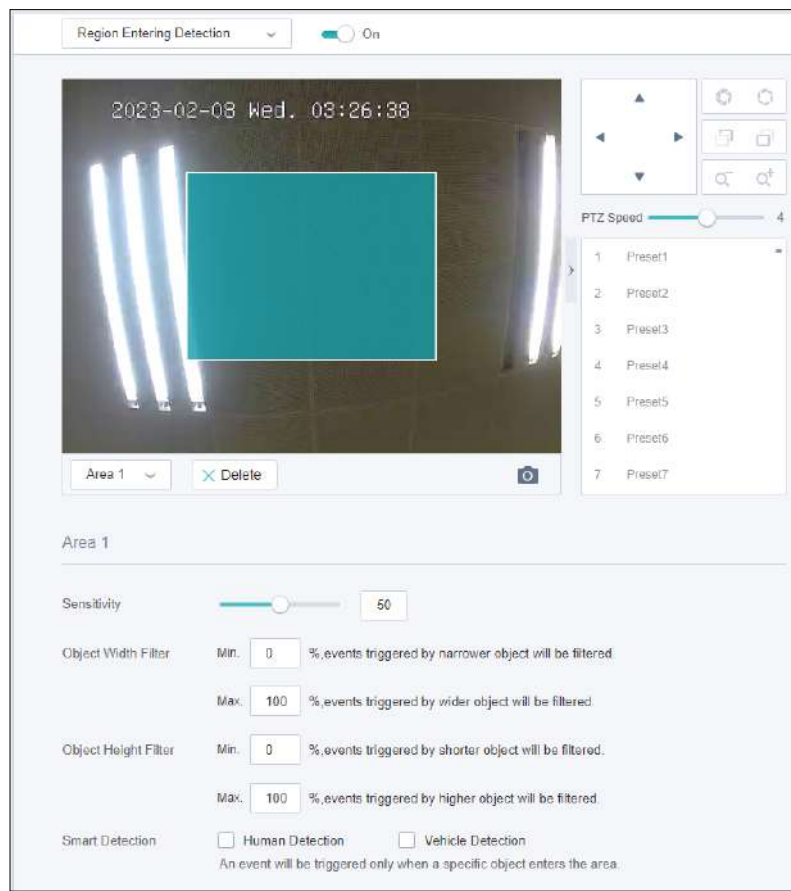


2. Enable **Region Entering Detection**.
3. Draw rectangles for area entrance detection on the preview screen.

Note: The maximum number of customized areas is 4. You need to configure settings for each area.


Sensitivity	Adjust the value of sensitivity. A higher value can trigger alarm actions more easily.
Object Width Filter	Set the minimum and maximum object width to filter the corresponding events.
Object Height Filter	Set the minimum and maximum object height to filter the corresponding events.
Smart Detection	Select the detection type. It can be configured only for the cameras which support human detection and vehicle detection.

4. Set the arming schedule.

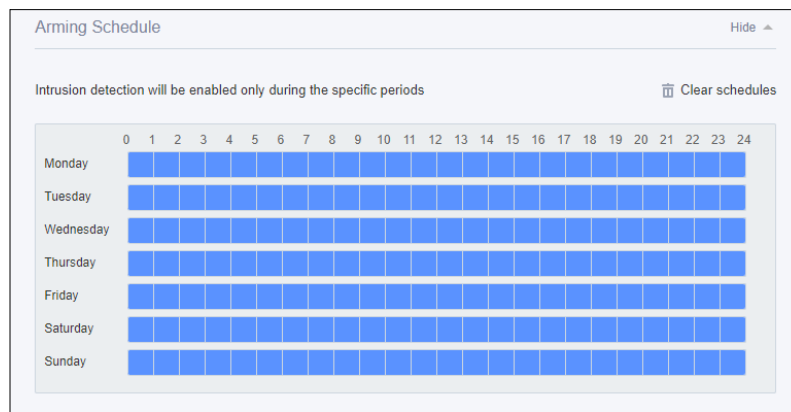

The screenshot shows the 'Arming Schedule' configuration page. At the top, it says 'Arming Schedule' with a 'Hide' button. Below that, a message states 'Intrusion detection will be enabled only during the specific periods' with a 'Clear schedules' button. The main part of the interface is a grid with 24 columns representing hours (0-24) and 7 rows representing days of the week (Monday to Sunday). All cells in the grid are filled with blue, indicating that intrusion detection is enabled for all hours of every day.

5. Set the processing mode. Note that the process mode options vary by model.

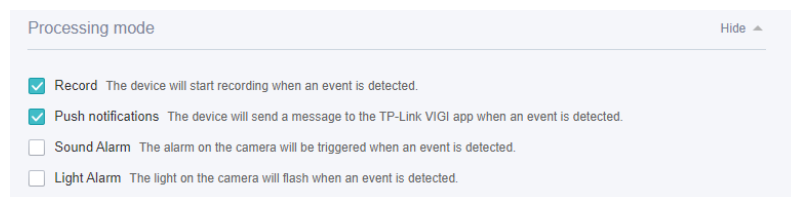

The screenshot shows the 'Processing mode' configuration page. At the top, it says 'Processing mode' with a 'Hide' button. Below that, there are four options, each with a checkbox and a description:


- Record The device will start recording when an event is detected.
- Push notifications The device will send a message to the TP-Link VIGI app when an event is detected.
- Sound Alarm The alarm on the camera will be triggered when an event is detected.
- Light Alarm The light on the camera will flash when an event is detected.

6. Click **Save** to save the settings.

♥ 6.6 Region Exiting Detection

Region exiting detection triggers alarm actions when cameras detect moving objects exit the specified regions. You can customize the region settings, select the triggered actions and set the alarm schedule. Follow the steps below to finish the configuration.

1. Go to **Settings > Event > Smart Event**, select **Region Exiting Detection** from the drop-down list.

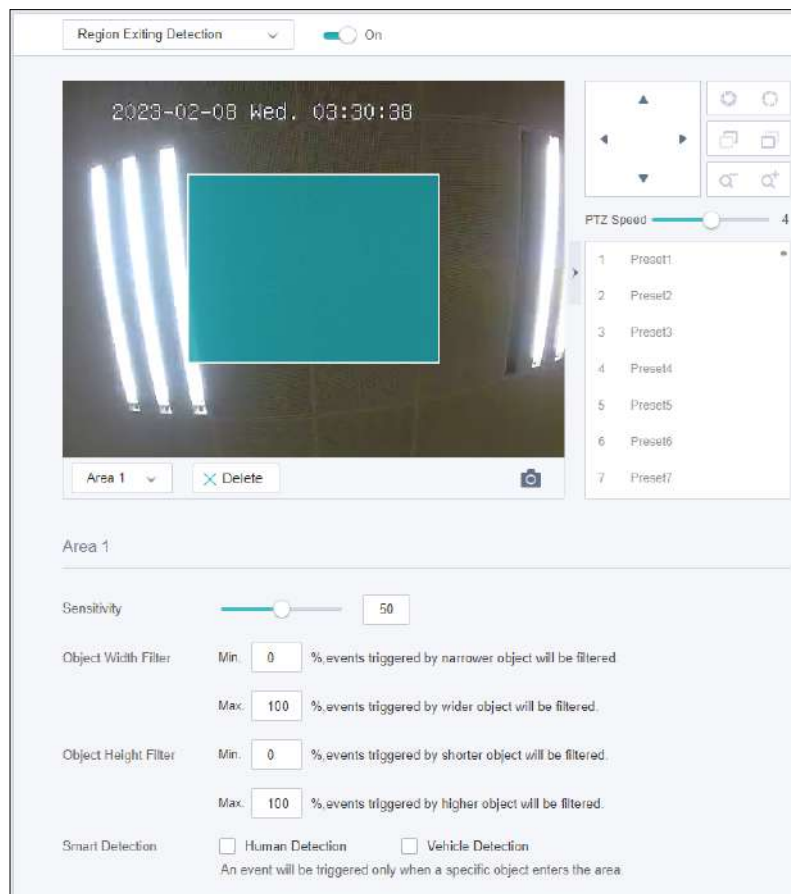


2. Enable **Region Exiting Detection**.
3. Draw rectangles for area exiting detection on the preview screen.


Note: The maximum number of customized areas is 4. You need to configure settings for each area.

Sensitivity	Adjust the value of sensitivity. A higher value can trigger alarm actions more easily.
Object Width Filter	Set the minimum and maximum object width to filter the corresponding events.
Object Height Filter	Set the minimum and maximum object height to filter the corresponding events.
Smart Detection	Select the detection type. It can be configured only for the cameras which support human detection and vehicle detection.

4. Set the arming schedule.

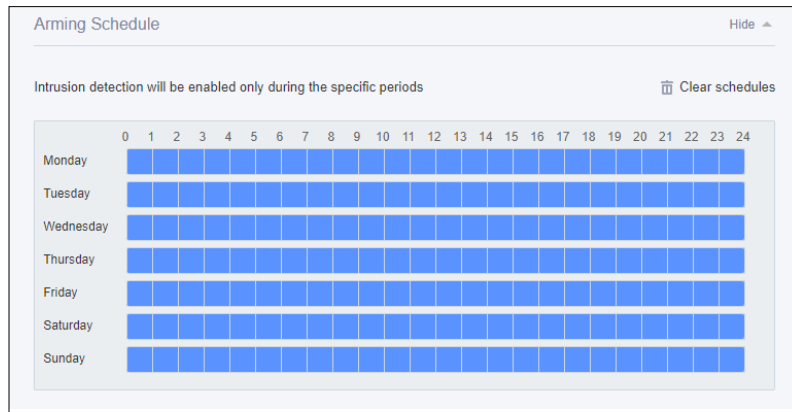

5. Set the processing mode. Note that the process mode options vary by model..

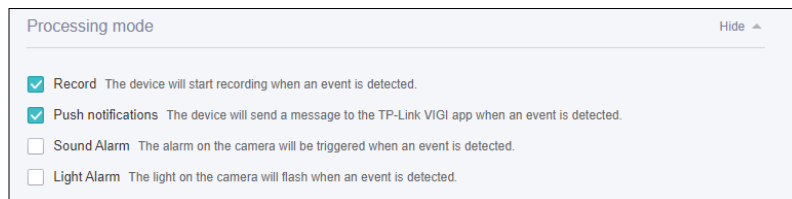


6. Click **Save** to save the settings.

♥ 6.7 Object Abandoned/Removal Detection

Object abandoned/removal detection triggers alarm actions when cameras detect objects are left behind or taken away in the specified areas. You can customize the area settings, select the triggered actions and set the alarm schedule. Follow the steps below to finish the configuration.

1. Go to **Settings > Event > Smart Event**, select **Object Abandoned/Removal Detection** from the drop-down list.

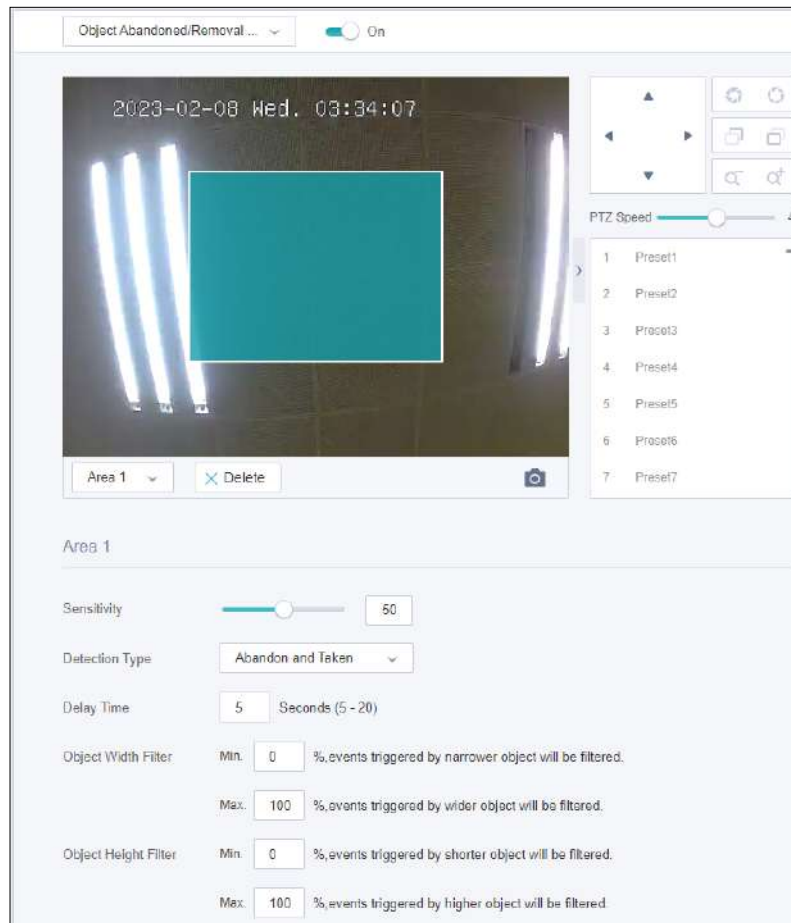


2. Enable **Object Abandoned/Removal Detection**.
3. Draw rectangles for area exiting detection on the preview screen.


Note: The maximum number of customized areas is 4. You need to configure settings for each area.

Sensitivity	Adjust the value of sensitivity. A higher value can trigger alarm actions more easily.
Detection Type	Select the detection type.
Delay Time	Set how long the object is left behind or taken away to trigger the event.
Object Width Filter	Set the minimum and maximum object width to filter the corresponding events.
Object Height Filter	Set the minimum and maximum object height to filter the corresponding events.

4. Set the arming schedule.

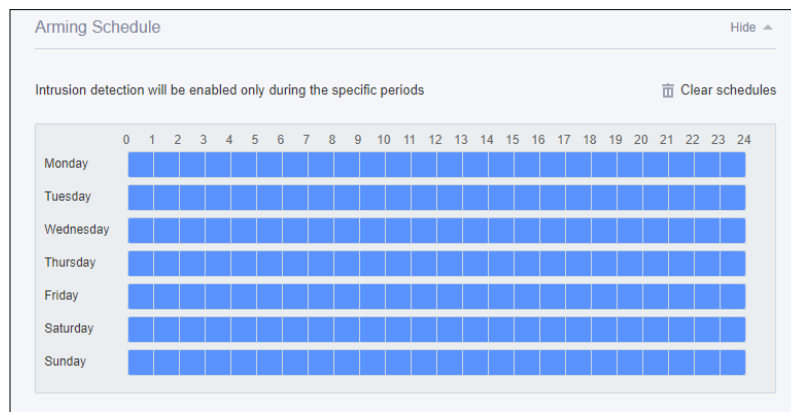

5. Set the processing mode. Note that the process mode options vary by model..

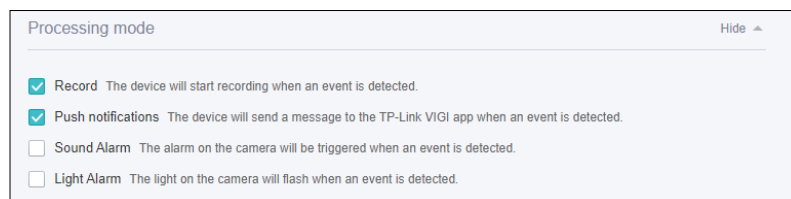


6. Click **Save** to save the settings.

♥ 6.8 Vehicle Detection

Vehicle detection triggers alarm actions when cameras detect vehicles are moving in the specified areas. You can customize the area settings, select the triggered actions and set the alarm schedule. Follow the steps below to finish the configuration.


1. Go to **Settings > Event > Smart Event**, select **Vehicle Detection** from the drop-down list.

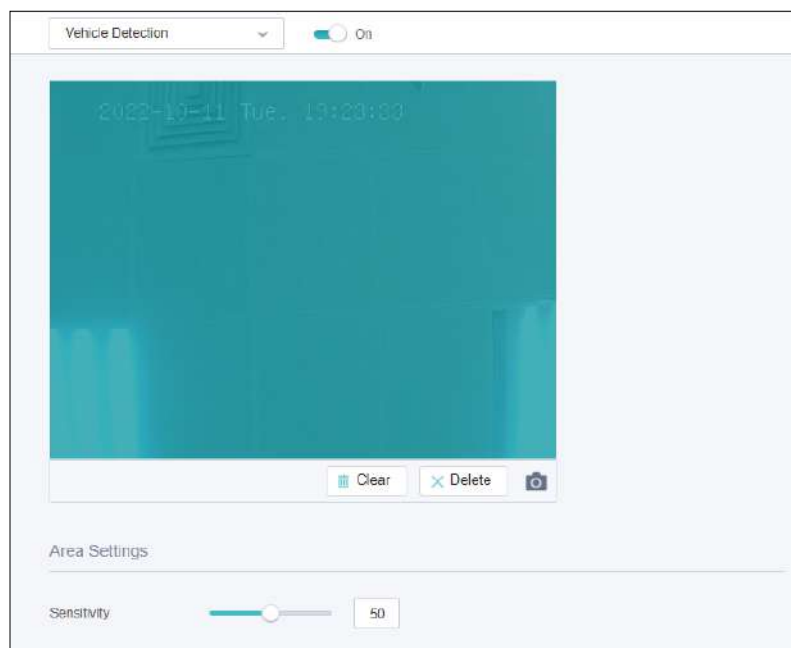


2. Enable **Vehicle Detection**.

3. Adjust the value of sensitivity. A higher value can trigger alarm actions more easily.

4. Set the arming schedule.

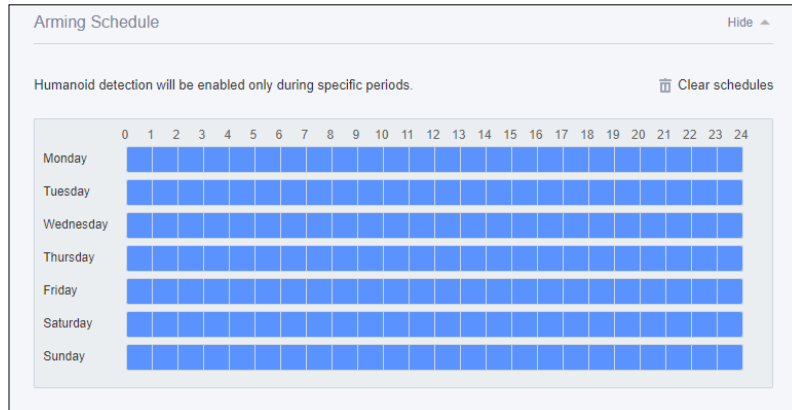

5. Set the processing mode. Note that the process mode options vary by model..

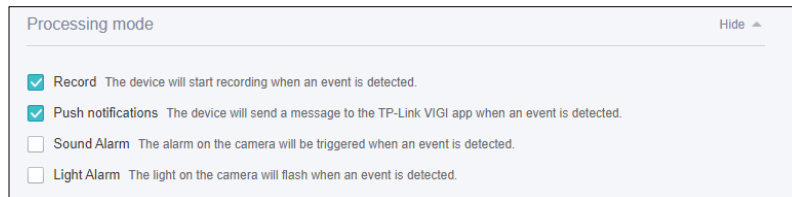


6. Click Save to save the settings.

♥ 6.9 Human Detection

Human detection triggers alarm actions when cameras detect persons are moving in the specified areas. You can customize the area settings, select the triggered actions and set the alarm schedule. Follow the steps below to finish the configuration.


1. Go to **Settings > Event > Smart Event**, select **Human Detection** from the drop-down list.

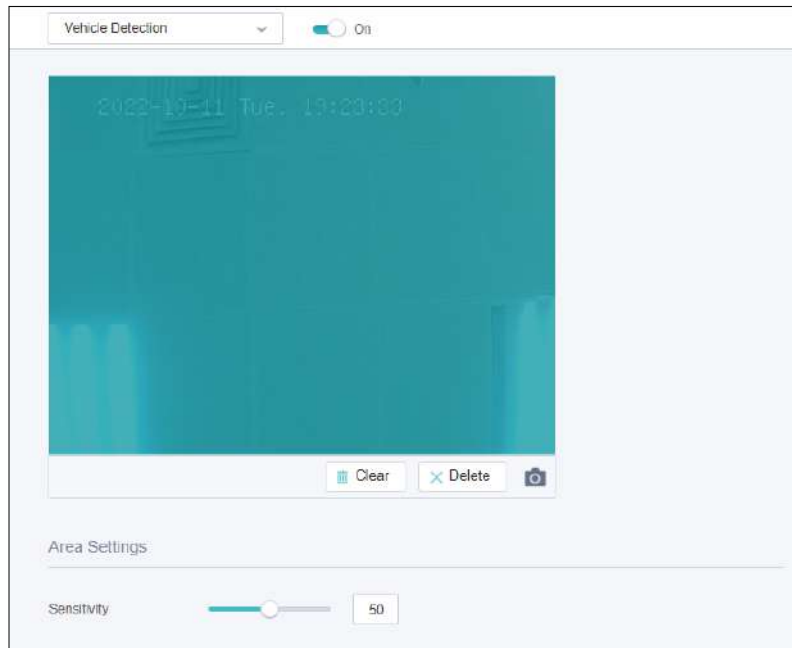


2. Enable **Human Detection**.

3. Adjust the value of sensitivity. A higher value can trigger alarm actions more easily.

4. Set the arming schedule.

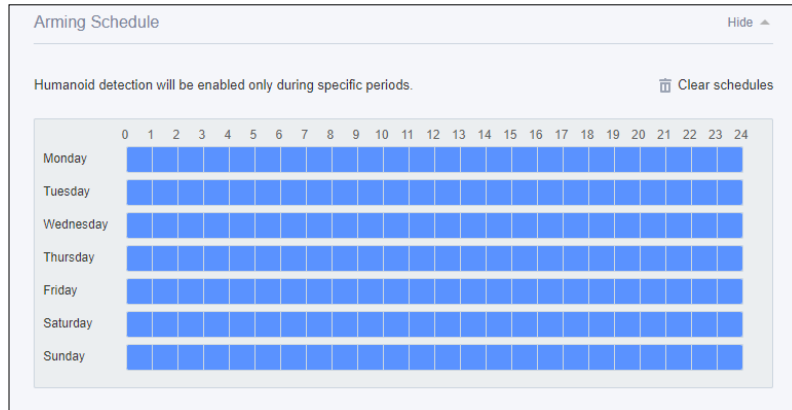

5. Set the processing mode. Note that the process mode options vary by model..

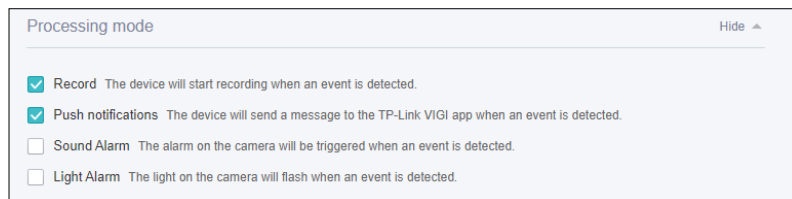


6. Click Save to save the settings.

♥ 6.10 Light Alarm (Only for some models)

Enable Light Alarm, then the light on the camera will flash when an event is detected.

Go to **Settings > Event > Alarm Device > Light Alarm**. Enable **Light Alarm**, then schedule when the light alarm will be triggered.

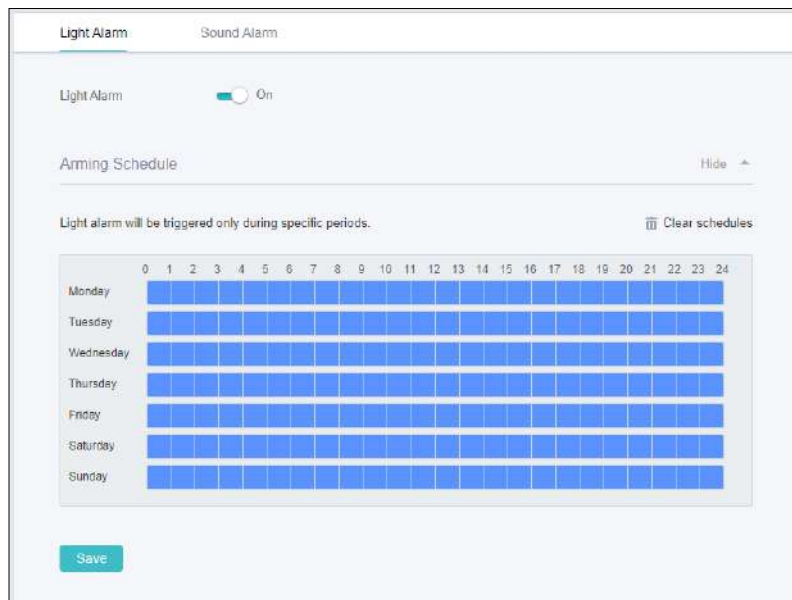

♥ 6.11 Sound Alarm (Only for some models)

Enable Sound Alarm, then the alarm on the camera will be triggered when an event is detected.

Go to **Settings > Event > Alarm Device > Sound Alarm**. Enable **Sound Alarm**, select the **Alarm Type**, then schedule when the sound alarm will be triggered.

♥ 6.12 Exception Event

Set the maximum login attempts to protect the security of your camera. The camera will be locked for 30 minutes if you enter the wrong password more than the specified attempts. Follow the steps below to finish the configuration.

1. Go to **Settings > Event > Exception Event**.

2. Enable **Login Error Detection** to limit the login attempts:
3. Set the maximum login attempts. The number should be between 3 and 10
4. Click **Save** to save the settings.

Note: To unlock the camera and try to log in again, power the camera off then power it on.

7

Recording and Storage


This chapter guides you on how to view and configure recording and storage settings on your camera. VIGI camera allows you to set your own recording schedules and parameters. This chapter includes the following sections:

- [Recording Schedule](#)
- [Storage Management](#)

♥ 7.1 Recording Schedule

Recording schedule section provides convenience and flexibility for the daily monitoring of your camera. You can customize the recording schedules. You can set different schedules for each day. In Advanced Settings page, you can set the pre-recording time and delay time for recording.

1. Go to **Settings > Storage > Recording Schedule**.

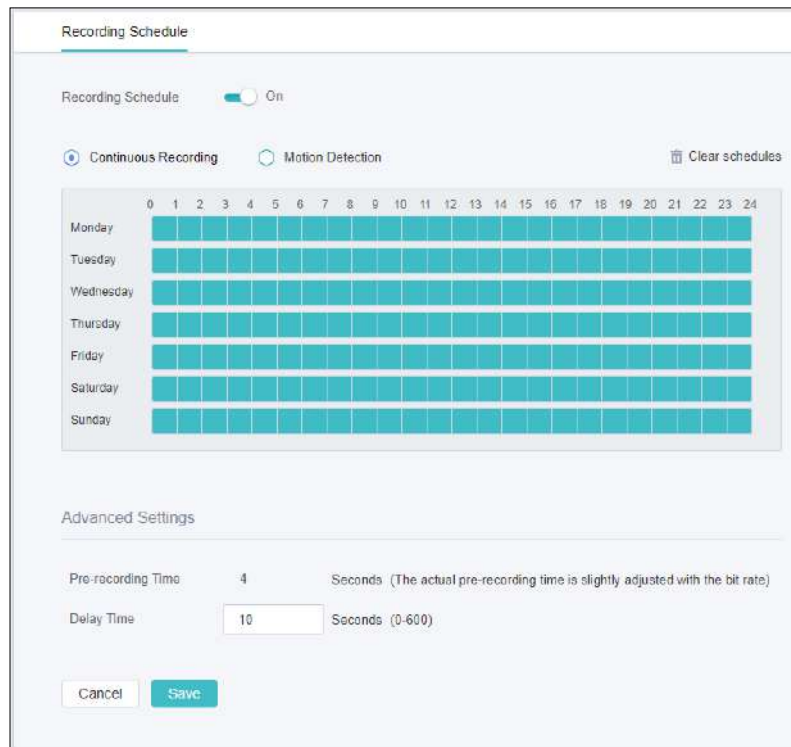

2. Enable **Recording Schedule**, select continuous recording or motion detection, then select the time.


Continuous Recording	The camera will record continuously.
Motion Detection	The camera will record when motion is detected.
Pre-recording Time	The time is set for cameras to record before the scheduled time or event. For example, the schedule for continuous recording starts at 10:00. If you set the pre-recording time as 5 seconds, the camera starts to record at 9:59:55.
Delay Time	The time is set for cameras to record after the scheduled time or event. For example, if you set the post-record time as 5 seconds, it records till 11:00:05 as motion detection ends at 11:00.

3. Click **Save** to save the settings.

♥ 7.2 Storage Management

In Storage Management, you can view the parameters and configure the properties and disk group of SD card. You can also enable the camera to overwrite the earlier recording files when the SD card is full.

1. Go to **Settings > Storage > Storage Management**.

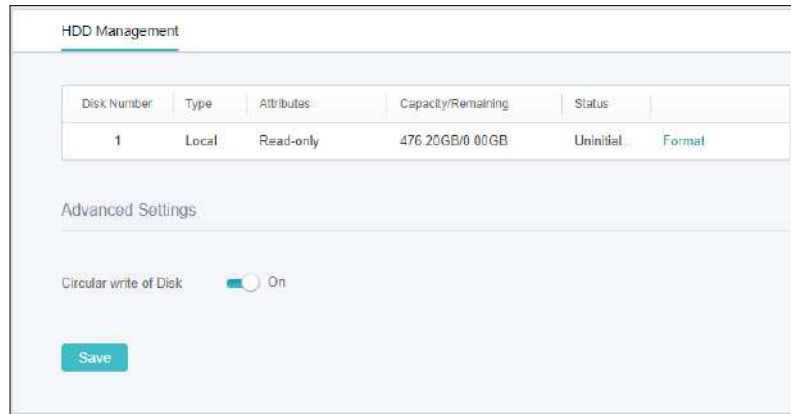

2. You can view the details of the storage. If the SD card is not initialized, click **Format** to format the SD card.
3. Determine if you want to enable the camera to overwrite the earlier recording files when the SD card is full.
4. Click **Save** to save the settings.

8

Network Management

With proper network configurations, you can connect your camera to the internet, build up mapping between internal and external ports. This chapter contains the following sections:

- [Configure Network Connection](#)
- [Configure Ports](#)
- [Configure Port Forwarding](#)
- [Configure IP Restriction](#)
- [Configure Multicast](#)

♥ 8.1 Configure Network Connection

In Connection, you can view the connection status and configure the camera to obtain a dynamic or static IP address.

Follow the steps below to configure the network settings.

1. Go to **Settings > Network Settings > Connect**.

The screenshot shows the 'Internet Connection' configuration interface. At the top, the status is 'Connected'. Below this, there are two sections: 'Basic Settings' and 'Advanced Settings'. In the 'Basic Settings' section, the 'Mode' is set to 'Static IP'. The 'IP Address' is '192.168.0.60', 'Subnet Mask' is '255.255.255.0', 'Gateway' is '192.168.0.1', 'Preferred DNS' is '192.168.31.1', and 'Alternative DNS' is '0.0.0.0'. In the 'Advanced Settings' section, the 'MTU' is '1480' and 'Adaptive IP' is turned 'Off'. A 'Save' button is located at the bottom left of the form.

Status Displays the current internet status.

Mode Configure the camera to obtain a dynamic or static IP address.

IP Address Specify an IP address for the camera. The IP address should be in the same segment as the gateway; otherwise, the camera cannot connect to the internet.

Subnet Mask Enter the subnet mask.

Gateway Enter the IP address of the gateway device to which the data packets will be sent. This IP address should be in the same segment as the camera's IP address.

Preferred / Alternative DNS Enter the IP address of the DNS server.

MTU	Specify MTU (Maximum Transmission Unit) to decide the largest size of data unit that can be transmitted in the network. A larger unit can improve the efficiency with more data in each packets, but it may increase the network delay because it needs more time to transmit. Therefore, if you have no special needs, it is recommended to keep the default value.
Adaptive IP	Enable this option if you want to set the camera's IP to change according to the network topology.

Note: The cameras should be in the same segment with the NVR, so that the NVR can discover and manage them.

2. Click **Save** to save your settings.

♥ 8.2 Configure Ports

In Port, you can configure the HTTPS port and service port of NVR that can be used to access the NVR through the network. When managing and monitoring the devices via VIGI Security Manager or the VIGI app, the ports configured here are used for communications of corresponding protocols.

Go to **Settings > Network Settings > Port**. Specify HTTPS port and service port. Click **Save**.

The screenshot shows a web interface titled "Port" with three input fields: "HTTPS" with the value "443", "RTSP" with the value "554", and "Video Service" with the value "8800". At the bottom, there are two buttons: "Restore" and "Save".

HTTPS	Specify a port for HTTPS protocol.
RTSP	Specify a port for RTSP protocol.
Video Service	Specify a port for protocols of video services

♥ 8.3 Configure Port Forwarding

Port Forwarding is used to establish the mapping between the internal port and external port. When Port Forwarding is enabled, you can access the device and watch the videos when accessing the external port remotely.

Note: The cameras should be connected to the internet, and Port Forwarding should be enabled on the gateway.

Follow the steps below to configure Port Forwarding.

1. Go to **Settings > Network Settings > Port Forwarding**.
2. Enable Port Forwarding and specify a mapping type. If you select **Auto** as the mapping type, the mappings are established automatically. If you select **Manual** as the mapping type, click **Edit** to specify the external port.

Port Type	Internal Port	External Port	Internal IP	Status	
HTTPS	443	443	192.168.0.60	Disabled	Edit
RTSP	554	554	192.168.0.60	Disabled	Edit
Video Service	8000	8000	192.168.0.60	Disabled	Edit

Port Type	Displays the protocol type.
Internal Port	Displays the port of the NVR to be converted.
External Port	Displays the external port opened by the gateway.
Internal IP	Displays the IP address of the NVR that needs to be converted.
Status	Displays the status of mapping.
Restore	Click to restore the settings to default factory settings.

3. Click **Save**.

With Port Forwarding enabled, you can remotely watch the videos with the URL `rtsp://A.B.C.D:Port/streamN`, for example, `rtsp://10.0.1.47:28736/stream1`. A.B.C.D is the WAN IP address of the gateway, and Port is the number of RTSP external port. N can be number 1 or 2 that indicates the stream, 1 for main stream and 2 for substream.

♥ 8.4 Configure IP Restriction

When IP Restriction is enabled, you can add IP addresses to the deny list or allow list to restrict the access to the camera. The IP address in the deny list cannot access the camera, while only the IP addresses in the allow list can access the camera.

Follow the steps below to configure IP Restriction.

1. Go to **Settings > Network Settings > IP Restriction**.

2. Enable IP Restriction and specify the restriction rule. If you select **Deny List**, the devices with the IP addresses specified in the table will not be able to access the camera. If you select **Allow List**, only the devices with the IP addresses specified in the table can access the camera.

The screenshot shows the 'IP Restriction' configuration window. At the top, there is a toggle for 'IP Restriction' which is currently turned 'On'. Below that, the 'Restriction Rule' is set to 'Deny List - Block the IP addresses on the list.' There is also an option for 'Allow List - Allow only the IP addresses on the list.' which is not selected. Below the rules, there is a table with two columns: 'Description' and 'IP Address'. Below the table, there are two buttons: 'Delete the Selected' and 'Add'. At the bottom of the window, there are two buttons: 'Restore' and 'Save'.

3. Click **Add** to add the desired IP address, give a description to identify this IP address, then click **Save**.

The screenshot shows a 'Set IP' dialog box. It has a title bar with 'Set IP' and a close button (X). Inside the dialog, there are two input fields: 'Description' and 'IP Address'. Below the input fields, there are two buttons: 'Cancel' and 'Save'.

4. Click **Save** to save your settings.


♥ 8.5 Configure Multicast

When Multicast is enabled, you can watch videos using the multicast address and port.

Follow the steps below to configure Multicast.

1. Go to **Settings > Network Settings > Multicast**.

2. Select the stream type, then enable **Multicast**. For the multicast address and port, you can disable Random IP Port and specify a static address and port, or enable it and use a random one. Click **Save**.

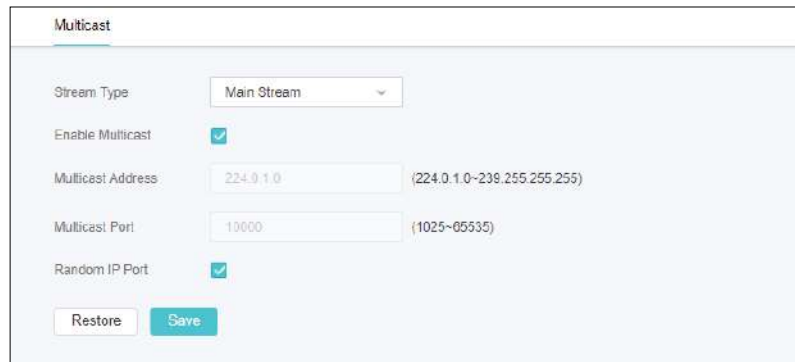

The screenshot shows a configuration window titled "Multicast". It contains the following fields and controls:

- Stream Type:** A dropdown menu currently set to "Main Stream".
- Enable Multicast:** A checked checkbox.
- Multicast Address:** A text input field containing "224.0.1.0" with a range "(224.0.1.0-239.255.255.255)" to its right.
- Multicast Port:** A text input field containing "10000" with a range "(1025~65535)" to its right.
- Random IP Port:** A checked checkbox.
- At the bottom, there are two buttons: "Restore" and "Save".

After Multicast enabled, you can watch the video with the URL `rtsp://A:B:C:D/multicastStreamN`, for example, `rtsp://192.168.0.3/multicastStream1`. A.B.C.D is the IP address of the camera, and N can be number 1 or 2 that indicates the stream, 1 for main stream and 2 for substream.




Cloud Service

After connecting your camera to the internet, you can manage it remotely via Cloud Services.

The camera supports remote management with the support of TP-Link Cloud Services. With a TP-Link ID bound, you can remotely monitor your areas on multiple platforms, including computers and mobile phones.

Follow the steps below to bind your TP-Link ID to the camera and download the VIGI Security Manager or VIGI app.

1. Go to **Settings > Cloud Service**.
2. Click **Go to Bind**. Enter your TP-Link ID and password and click **Bind**. If you do not have a TP-Link ID, click **Sign Up** to register.

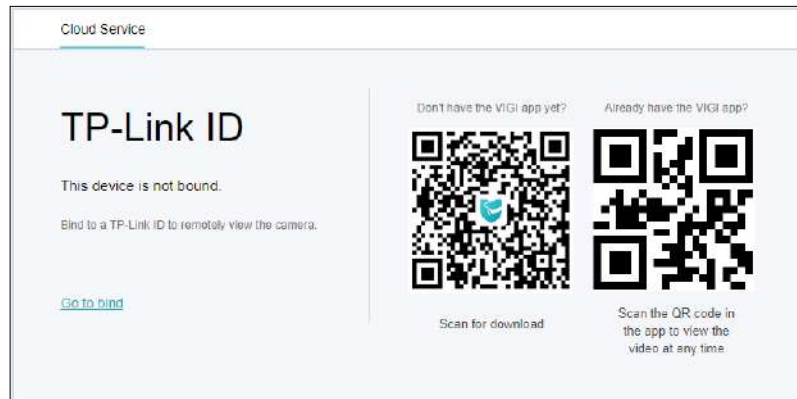

3. After binding your TP-Link ID, download VIGI Security Manager on the computer from [Download Center](#), or download the VIGI app on your mobile phone by scanning the QR code below. Log in with your TP-Link ID. Then you can monitor the live view and manage the camera remotely on your computer or mobile phone.



If you want to unbind the TP-link ID, click **Unbind** on the same page and follow the web instructions to unbind the camera.

10


System Settings

This chapter guides you to configure the basic and advanced settings of your camera, export and import settings. You can create and modify administrator accounts based on your needs. This chapter includes the following sections:

- [Configure Basic Settings](#)
- [Modify System Time](#)
- [Manage User Accounts](#)
- [System Management](#)
- [Upgrade Firmware](#)
- [Reboot Device Regularly](#)

♥ 10.1 Configure Basic Settings


To configure the settings for your camera, go to **Settings > System Settings > Basic Settings**. You can view and change the name of your camera, turn on or off the status LED (only for some models).

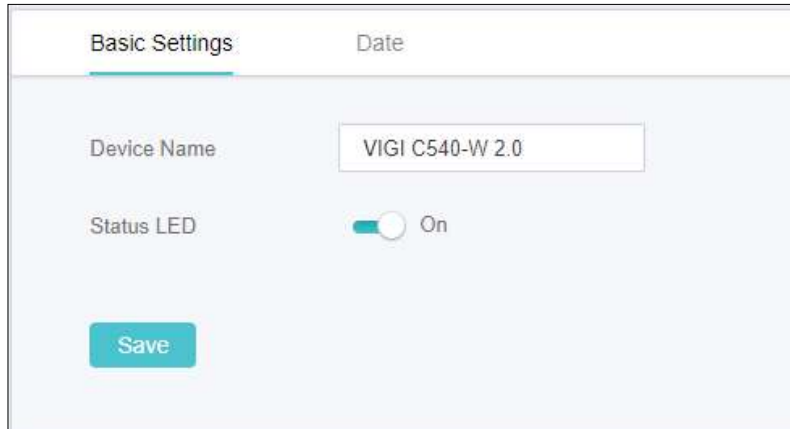

The screenshot shows the 'Basic Settings' page. At the top, there are two tabs: 'Basic Settings' (selected) and 'Date'. Below the tabs, there are two main settings: 'Device Name' with a text input field containing 'VIGI C540-W 2.0', and 'Status LED' with a toggle switch currently turned 'On'. A blue 'Save' button is located at the bottom left of the settings area.

♥ 10.2 Modify System Time

VIGI camera provides two methods to modify the system time. NTP (Network Time Protocol) can automatically get the system time from the internet, or you can manually set the system time. You can also select the time zone according to your region, and configure the DST settings. To configure these settings, go to **Settings > System Settings > Date**.

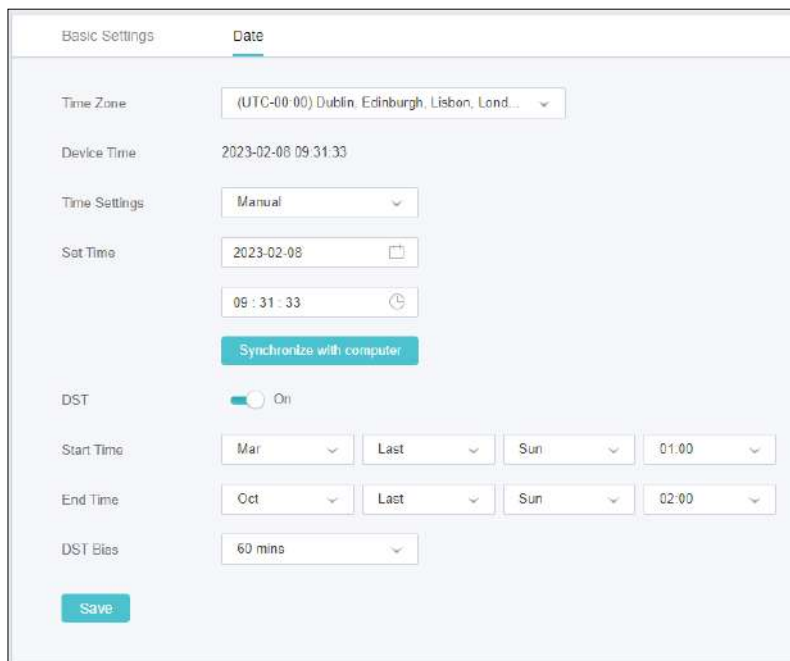


The screenshot shows the 'Date' settings page. At the top, there are two tabs: 'Basic Settings' and 'Date' (selected). The settings include: 'Time Zone' with a dropdown menu showing '(UTC-00:00) Dublin, Edinburgh, Lisbon, Lond...'; 'Device Time' showing '2023-02-08 09:31:33'; 'Time Settings' with a dropdown menu set to 'Manual'; 'Set Time' with a date input field showing '2023-02-08' and a time input field showing '09:31:33'; a blue 'Synchronize with computer' button; 'DST' with a toggle switch turned 'On'; 'Start Time' with four dropdown menus for month (Mar), occurrence (Last), day (Sun), and time (01:00); 'End Time' with four dropdown menus for month (Oct), occurrence (Last), day (Sun), and time (02:00); and 'DST Bias' with a dropdown menu set to '60 mins'. A blue 'Save' button is located at the bottom left.

♥ 10.3 Manage User Accounts

You can modify the default user account (admin) based on your needs. The Administrator user name is admin and the password is set when you set up your camera for the first time. To configure these settings, go to **Settings > System Settings > User Management**.



Click **Edit** to change the settings.

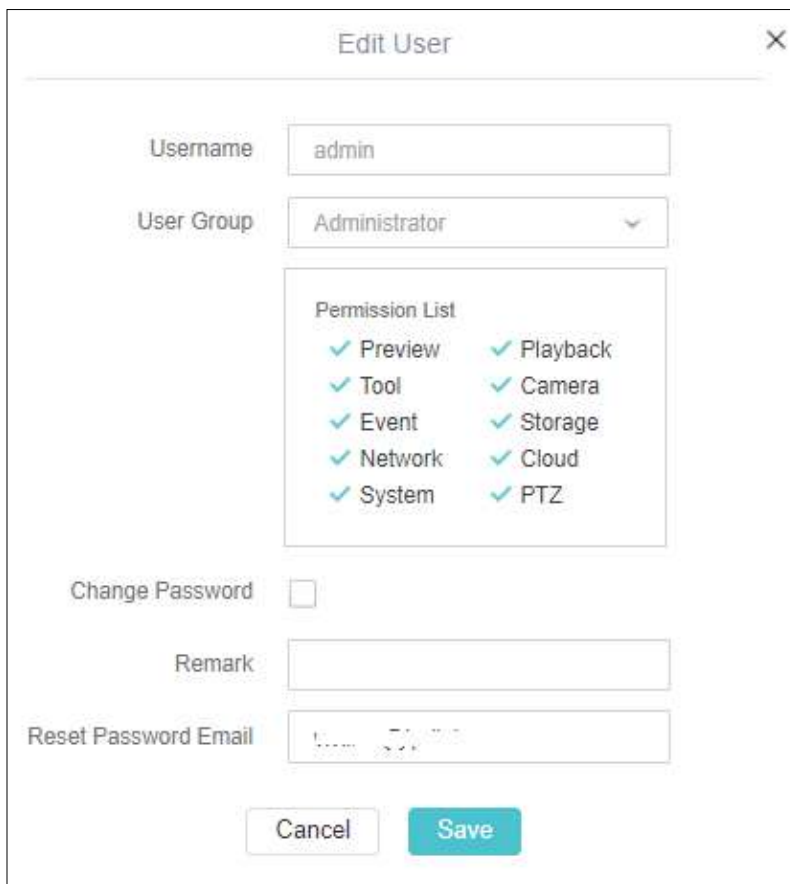

Select the **Change Password** checkbox to change the password.

The screenshot shows the 'Edit User' form with the following details:

- Username:** admin
- User Group:** Administrator
- Permission List:**
 - Preview, Playback, Tool, Camera, Event, Storage, Network, Cloud, System, PTZ (all checked)
- Change Password:**
- Old Password:** [Empty text box]
- New Password:** [Empty text box]
- Confirm Password:** [Empty text box]
- Remark:** [Empty text box]
- Reset Password Email:** vivi.luo@tp-link.com
- Buttons:** Cancel, Save

Enter the old password and set a new password. Click **Save** to save your settings, then you will need use the new password to log into the camera.

♥ 10.4 System Management

You can reset the camera to factory default settings, import and export the configuration file of your camera. To configure these settings, go to **Settings > System Settings > System Management**.

The screenshot shows the 'System Management' section with the following details:

- System Management:** Upgrade Firmware, Reboot Device
- Reset to Factory Default:** Reset
- Export configuration file:** Export
- Import configuration file:** [Text input field], Browse, Import

To reset the camera, click the **Reset** button to reset the camera.

To export the configuration file, click the **Export** button.

To import the configuration file, click **Browse** to select your file, then click **Import**.

♥ 10.5 Upgrade Firmware

TP-Link aims at providing better network experience for users. We will inform you through the web management page if there's any update firmware available for your router. Also, the latest firmware will be released at the TP-Link official website www.tp-link.com, and you can download it from the **Support** page for free.

Note:

- Backup your camera configuration before firmware upgrade.
- Do NOT power off the camera during the firmware upgrade.

10.5.1 Online Upgrade

1. Go to **Settings > System Settings > System Management > Upgrade Firmware**.
2. Click **Check for Update** to see whether the latest firmware is released.



3. Focus on the **Online Upgrade** section, and click **Upgrade** if there is new firmware.
4. Wait a few minutes for the upgrade and reboot to complete.

10.5.2 Local Upgrade


1. Download the latest firmware file for the router from www.tp-link.com.
2. Go to **Settings > System Settings > System Management > Upgrade Firmware**.
3. Click **Browse** to locate the downloaded new firmware file, and click **Update**.
4. Wait a few minutes for the upgrade and reboot to complete.

♥ 10.6 Reboot Device Regularly

You can The Scheduled Reboot feature cleans the cache to enhance the running performance of the camera.

1. Go to **Settings > System Settings > Reboot Device**.
2. Enable **Scheduled Reboot**.

3. Select the day and time and click **Save** to save your settings. Then your camera will reboot regularly at a specific time.

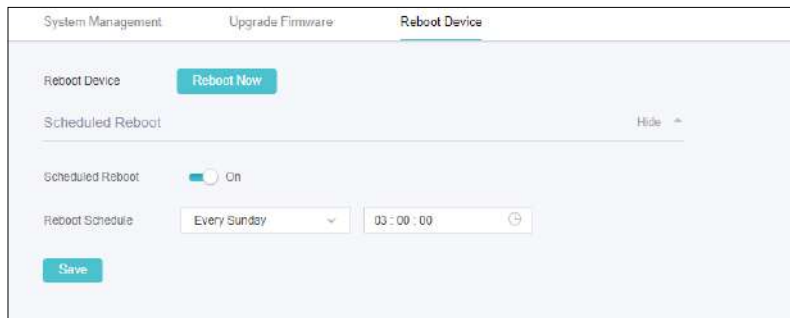

Note: You can click **Reboot Now** to reboot the camera immediately.

CE Mark Warning



This is a class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

OPERATING FREQUENCY (the maximum transmitted power)

2412MHz—2472MHz (20dBm)

EU declaration of conformity

TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of directives 2014/53/EU, 2009/125/EC, 2011/65/EU and (EU)2015/863.

The original EU declaration of conformity may be found at <https://www.tp-link.com/en/support/ce/>

RF Exposure Information

This device meets the EU requirements (2014/53/EU Article 3.1a) on the limitation of exposure of the general public to electromagnetic fields by way of health protection.


The device complies with RF specifications when the device used at 20 cm from your body.



UK Declaration of Conformity

TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Regulations 2017.

The original UK Declaration of Conformity may be found at <https://www.tp-link.com/support/ukca/>

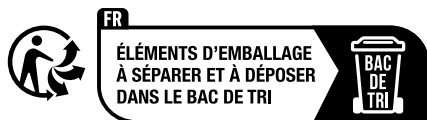

Korea Warning Statements:

당해 무선설비는 운용중 전파혼신 가능성이 있음.

NCC Notice & BSMI Notice:

注意!

取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前述合法通信，指依電信管理法規定作業之無線電通信。

低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

安全諮詢及注意事項

- 請使用原裝電源供應器或只能按照本產品注明的電源類型使用本產品。
- 清潔本產品之前請先拔掉電源線。請勿使用液體、噴霧清潔劑或濕布進行清潔。
- 注意防潮，請勿將水或其他液體潑灑到本產品上。
- 插槽與開口供通風使用，以確保本產品的操作可靠並防止過熱，請勿堵塞或覆蓋開口。
- 請勿將本產品置放於靠近熱源的地方。除非有正常的通風，否則不可放在密閉位置中。
- 不要私自拆開機殼或自行維修，如產品有故障請與原廠或代理商聯繫。

限用物質含有情況標示聲明書

設備名稱： Equipment name		型號（型式）： Type designation (Type)				
4MP Outdoor Full-Color Wi-Fi Bullet Network Camera/4MP Full-Color Wi-Fi Turret Network Camera/4MP Outdoor Full-Color Wi-Fi PT Network Camera		VIGI C340-W/VIGI C440-W/VIGI C540-W				
單元 Unit	限用物質及其化學符號 Restricted substances and its chemical symbols					
	鉛 Lead (Pb)	汞 Mercury (Hg)	鎘 Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr ⁶⁺)	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
PCB	○	○	○	○	○	○
外殼	○	○	○	○	○	○
電源供應器	—	○	○	○	○	○
天線	○	○	○	○	○	○

備考1. “超出0.1 wt %” 及 “超出0.01 wt %” 係指限用物質之百分比含量超出百分比含量基準值
Note 1: “Exceeding 0.1 wt %” and “exceeding 0.01 wt %” indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.
備考2. “○” 係指該項限用物質之百分比含量未超出百分比含量基準值。
Note 2: “○” indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.
備考3. “—” 係指該項限用物質為排除項目。
Note 3: The “—” indicates that the restricted substance corresponds to the exemption.



Продукт сертифіковано згідно с правилами системи УкрСЕПРО на відповідність вимогам нормативних документів та вимогам, що передбачені чинними законодавчими актами України.













Safety Information

- Keep the device away from water, fire, humidity or hot environments.
- Do not attempt to disassemble, repair, or modify the device. If you need service, please contact us.
- Do not use damaged charger or USB cable to charge the device.
- Do not use any other chargers than those recommended
- Do not use the device where wireless devices are not allowed.
- Adapter shall be installed near the equipment and shall be easily accessible.
- Use only power supplies which are provided by manufacturer and in the original packing of this product. If you have any questions, please don't hesitate to contact us.
- Operating Temperature: -30°C -60°C
- This product uses radios and other components that emit electromagnetic fields. Electromagnetic fields and magnets may interfere with pacemakers and other implanted medical devices. Always keep the product and its power adapter more than 15 cm (6 inches) away from any pacemakers or other implanted medical devices. If you suspect your product is interfering with your pacemaker or any other implanted medical device, turn off your product and consult your physician for information specific to your medical device.

Please read and follow the above safety information when operating the device. We cannot guarantee that no accidents or damage will occur due to improper use of the device. Please use this product with care and operate at your own risk.

Explanations of the symbols on the product label

Symbol	Explanation
	DC voltage
	AC voltage
	Class II equipment
	Polarity of output terminals
	Energy efficiency Marking
	Indoor use only
	Waterproof Level
	Caution
	Operator's manual
	<p>RECYCLING</p> <p>This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment.</p> <p>User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.</p>